
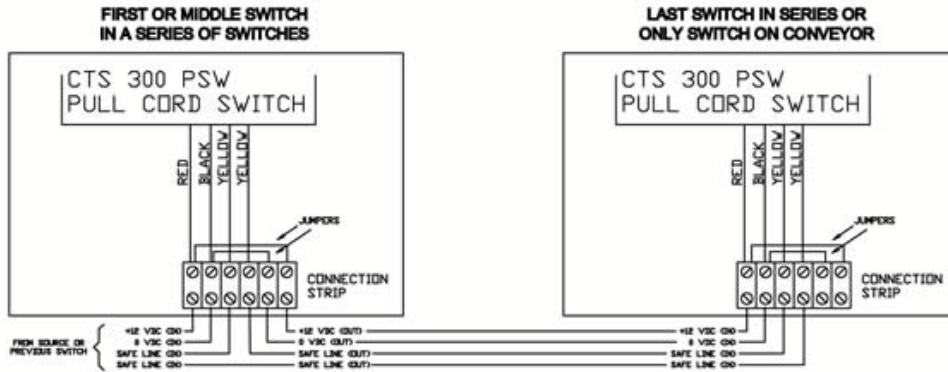


CTS 300PSW Connection Diagram

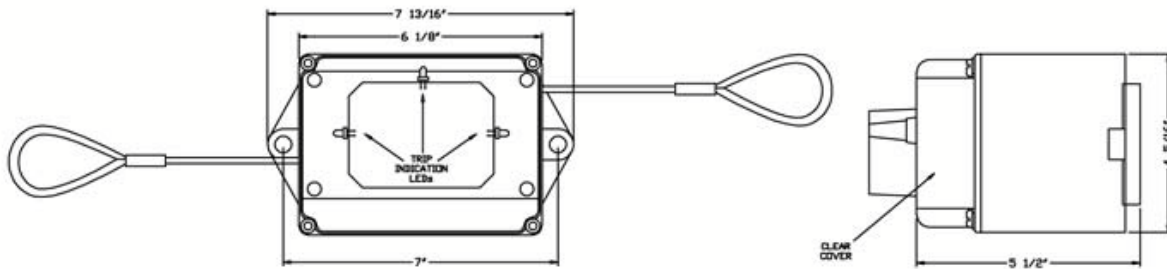

NOTE: All trip switches should be manually tested when installed and on regular intervals to insure that they are operating correctly.